





User Guide

Copyright

© 2017 ZIH Corp. and/or its affiliates. All rights reserved. ZEBRA and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

COPYRIGHTS & TRADEMARKS: For complete copyright and trademark information, go to www.zebra.com/copyright **WARRANTY:** For complete warranty information, go to www.zebra.com/warranty **END USER LICENSE AGREEMENT:** For complete EULA information, go to www.zebra.com/eula

Terms of Use

Proprietary Statement This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Contents

Introduction	1
Printer Components	2
Printer Status LEDs	3
Setup	5
Unpacking the Printer	5
Loading Cards	6
Installing the Card Catcher	7
Installing the Cleaning Roller	8
Installing the Print Ribbon	8
Windows Driver Installation	9
Connecting Power	14
Connecting USB	14
Tab Waste Bin	15
Maintenance	17
Cleaning the Printhead	17
Cleaning the Platen	
Cleaning the Cleaning Roller	
Cleaning the Outer Cover	19
Cleaning the Filters	19
Transporting the Printer	19
Troubleshooting	21
Failure Symptoms	21
Card Jam	22
Power Supply Interrupted during Printing	23



Introduction

This manual contains setup, maintenance, and troubleshooting information for the Zebra ZC10L Card Printer.

Designed especially to meet the needs of the Hospitality market, Zebra's ZC10L[™] is the only large-format, direct-to-card printer that can print full, edge-to-edge color cards in one printing process.

Printer Components



1	Printer Status Indicators	Printer status display LEDs are located on the panel.
2	Top Cover	Open the top cover when replacing a ribbon or card, or when performing maintenance.
3	Card Drawer	Open the card drawer when inserting cards, or when performing maintenance.
(4)	Card Drawer Release	Press to open the card drawer.
5	Power Switch	Turns on () and off (O) power to the printer.
6	Power Connection	
7	USB Connection	
8	Top Cover Release	Grasp and squeeze to open top cover.

Printer Status LEDs



LED Display			Description
Power	Media	Error	
0	0	0	Printer power is off.
×.	0	0	Printer is initializing; printhead is cooling or heating.
•	0	0	Printer is ready.
•	0	¢	Top cover or card drawer is open.
•	0	•	Card jam; mechanical error; main PCBA error.
•	×	•	Print ribbon is not supported.
•	•	•	Card feed error; out of ribbon, tab waste bin is full
•	×	¢	Print ribbon is synchronizing.
● On, ○ Off, ☆ Flashing			



Setup

Unpacking the Printer

- **Step 1.** Inspect the shipping container to ensure that no damage has occurred during shipment. If any damage is apparent, file a claim with the shipper.
- Step 2. Open the shipping container.
- **Step 3.** Remove the packing material and accessories
- **Important** Save all the packing material and the shipping carton in case the Printer needs to be moved or shipped. If the original material is lost or damaged, a replacement Shipping Kit can be ordered from Zebra.





If any items are missing, please contact your supplier.



Caution • The Printer weighs approximately 19 kg (41.9 lbs). Use two people to lift it out of the shipping carton.

Step 5. Lift the Printer out of the carton by holding it with both hands



- Step 6. Place the printer in a location that meets the following requirements:
 - A reasonably dust- and dirt-free environment.
 - Flat surface that can support the weight of the printer; additional space preferred. Allow a 4-inch minimum clearance on all sides.
 - AC power accessible.
 - Refer to the Product Spec Sheet for additional operating characteristics.

Loading Cards



Caution • DO NOT bend cards or touch print surfaces as this can reduce print quality. The surface of the cards must remain clean and dust free. Always store cards in an enclosed container. Ideally, use cards as soon as possible after unwrapping.

- Step 1. Remove the wrapping from the card stack.
- **Step 2.** Holding the card stack by the sides (do not touch the print surfaces), hold it vertically against a flat surface such as a desktop. If the stack is too thick for your hand to hold it comfortably, use about half a stack at a time.



Step 3. Push the stack back and forth to an angle of about 45° from vertical, so as to separate all of the cards.





Step 4. Restore the card stack to its original squared-off condition. Open the card drawer.

Step 5. While pulling the pusher plate, place the cards into the card drawer with the tabbed side down.





Step 6. Make sure the cards sit flat in the card drawer.



Installing the Card Catcher

- Step 1. Open the card drawer.
- Step 2. Install the card catcher onto the front edge of the card drawer.



Step 3. Close the card drawer.

Installing the Cleaning Roller

Step 1. Open the top cover.

Important • The cleaning roller can only be installed in one direction: the longer barreled side of the cleaning roller goes to the left, and the shorter barreled side to the right. Do not force the cleaning roller into an incorrect position.

- Step 3. Place the cleaning roller into the printer.
- Step 4. Push the cleaning roller into place as shown until you hear an audible click.



Installing the Print Ribbon

- **Step 1.** Install the ribbon by sliding the supply spool into the guide rails and toward the rear of the printer.
- Step 2. Slide the take-up spool into the guide rails and toward the front of the printer.







- Step 3. Rotate the supply spool slightly to remove excess slack in the ribbon.
- Step 4. Close the top cover.



Note • If the ribbon should break, apply a piece of tape to connect the broken ends and advance the ribbon past the break point.

Windows Driver Installation

The Zebra ZC10L Microsoft Windows Printer Driver supports Windows 7, Windows 8, Windows 10, Windows Server 2008, and Windows Server 2012.

- **Step 1.** Launch the printer Setup.
- Step 2. At the Software License Agreement window, select the radio button next to Agree and click Next.

ZC10L PrinterDriver Installer	x
Please read the following license agreement, If you agree the license agreement then check [Agree] and click [Next]. If you disagree the agreement then check [Cancel] and click [Cancel]	
Zebra Technologies, Inc. SOFTWARE LICENSE AGREEMENT [IMPORTANT] READ THIS AGREEMENT CAREFULLY BEFORE USING THE SOFTWARE ON THECD-ROM SUPPLIED WITH THE PRINTER. BY USING THIS SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE INCLUDING THE DOCUMENTS ON THE CD-ROM OR OUR WEBSITE PROVIDED, AND PROMPTLY RETURN THE WHOLE PRODUCT TO YOUR DEALER.	*
1. LICENSE Zebra Technologies, Inc. ("Zebra") grants you the non-exclusive right to use Agree Cancel	•
< <u>B</u> ack <u>N</u> ext > Cancel	

Step 3. Click Next.



Step 4. Click Next.

ZC10L PrinterDriver Installer	X
	Printer model
	Zebra ZC10L USB Card Printer
Select [Printer model] and	click [Next]
	< Back Next > Cancel

Step 5. Click Next.

ZC10L PrinterDriver Installer	×
Install Method	
Plug and Play	
Select [Plug and Play], and click [Next].	_
< <u>B</u> ack <u>N</u> ext > Can	cel

Step 6. Click Finish.

ZC10L PrinterDriver Installer	×
	[Printer Driver] Printer model: Zebra ZC10L USB Card Printer Install via Plug and Play.
Confirm printer driver inst	all information, and click [Finish].
	< <u>B</u> ack Finish Cancel

Step 7. Click Install this driver software anyway.

😵 Wir	ndows Security	
\bigotimes	Windows can't verify the publisher of this driver software	
	Don't install this driver software You should check your manufacturer's website for updated driver software for your device.	
	Install this driver software anyway Only install driver software obtained from your manufacturer's website or disc. Unsigned software from other sources may harm your computer or steal information.	
• ا	See <u>d</u> etails	
ZC10L	PrinterDriver Installer	
	Preparing Plug and Play	

< <u>B</u>ack

<u>N</u>ext >

Cancel

- Step 8. Follow the on-screen instructions:
 - a. Turn on the printer.
 - **b.** Connect the USB cable. The driver will automatically detect the printer and continue the installation.



Step 9. Click Finish.



Connecting Power

4

Electric Shock • Limit AC power supplied to the Printer to 90V~264V, 48–62Hz. Limit excess current draw to 16 amps or less, using an associated circuit breaker or other such device. Never operate the Printer in a location where operator, computer, or printer can get wet. Personal injury could result. The Printer must be connected to an earthed electrical power source and properly protected against electrical surges and grounding faults; the electrical reliability of the Printer is based on the reliability of the main power source and the earth connection.

The Printer's power supply is an internal unit that can only be serviced or replaced by trained and authorized personnel

Step 1. Insert the power cable into the receptacle located on the rear of the printer.



Connecting USB

Step 1. Connect the device side of the USB cable into the receptacle located on the rear of the printer.





Note • Before turning the printer power on, install the USB Printer Driver (see "Windows Driver Installation" on page 9).



Note • Do not remove the USB cable during data transfer.

Tab Waste Bin

- Step 1. Open the card drawer.
- **Step 2.** Remove the waste bin and empty the contents into a trash receptacle.



- Step 3. Replace the waste bin.
- Step 4. Close the card drawer.



Maintenance

By using thermal transfer technology, daily maintenance is not necessary if the printer is being used properly. However, to maintain the best print quality, it is recommended that the printhead, platen roller, and cleaning roller be cleaned once in a month.

Cleaning the Printhead



Caution • The printhead is very hot just after printing—do not touch. Make sure that the printhead has cooled down before cleaning.



Caution • While performing any tasks near an open printhead, remove all rings, watches, hanging necklaces, identification badges, or other metallic objects that could touch the print head. You are not required to turn off the printer power when working near an open print head, but Zebra recommends it as a precaution.

- **Step 1.** Open the top cover.
- **Step 2.** Use a lint-free cloth and isopropyl or ethyl alcohol to clean the heat element of the printhead, and the ribbon tension bars.



Cleaning the Platen

- Step 1. Open the top cover.
- Step 2. Remove the ribbon.
- **Step 3.** Use a lint-free cloth and isopropyl or ethyl alcohol to clean the platen roller and the ribbon tension bars.



Cleaning the Cleaning Roller

- **Step 1.** Remove the cleaning roller.
- Step 2. Use a lint-free cloth and isopropyl or ethyl alcohol to clean the cleaning roller.



Step 3. Replace the cleaning roller (see "Installing the Cleaning Roller" on page 8).

Cleaning the Outer Cover

Wipe the outer surface of the printer with a soft cloth; a diluted neutral detergent can be used for stubborn areas.

Cleaning the Filters

If the dust collects on the openings, clean it with vacuum cleaner.



Transporting the Printer

Remove the print ribbon, cards, and cleaning roller from the printer before transporting. If any of these cannot be removed due to a fault, contact your Zebra representative.

Use the original packaging for transport. If the original packaging is unavailable, contact your Zebra representative.



Troubleshooting

Failure Symptoms

When detecting a failure symptom, check the printer using the following table.

Symptom	Action
No power.	Check if the power cable is connected to the printer and the power source properly.
The computer does not recognize the printer.	Check if the USB cable is connected to the computer and the printer properly.
The printer does reach the ready state.	Make sure the card drawer and the top cover are closed. Check for card jam. Check printer status LEDs. If the printer is showing a card feed error, re-seat the cards.
The card drawer does not open or is jammed.	Make sure the printer is installed in a flat location. Make sure there are no obstructions to the card drawer.
White lines appear on the card print area.	The printhead may be dirty; clean the printhead. If the condition remains after cleaning, contact your Zebra representative.
Unprinted "spots" appear on the card print area.	The cleaning roller may be dirty; clean the cleaning roller. The printhead may be dirty; clean the printhead. If the condition remains after cleaning; contact your Zebra representative.

Card Jam

- **Step 1.** Open the top cover, and remove the ribbon.
- **Step 2.** A card can become jammed in one of several positions: at the rear of the printer in the card flipper; along the print path toward the rear, middle, or front; or protruding slightly from the exit slot. In any case the procedure is the same.
- **Step 3.** Locate the green manual (arrow below) advance wheel on the inside of the printer; it is located toward the rear on the left side.



Step 4. Turn the manual advance wheel clockwise until the card stops.



Step 5. Carefully remove the card.

Power Supply Interrupted during Printing

- **Step 1.** Set the printer power switch to the off position.
- Step 2. Wait for the power to be restored.
- **Step 3.** Wait a few seconds and turn the printer on.

If a batch print was in progress before the power interruption, some cards may need to be reprinted.

